


Two-piece case print kit

Bottom tray and top lid for 3 NeoSliders beside 2 quad rotaries. 5 x 4 cells, 25 mm inside. Top is already flipped: put the STL on the bed as exported. Boards screw into bosses under the lid. M3 screws come from below through the tray into the lid posts.

Print pair


Print pair 3 NeoSlider + 2 quad rotary
Left: tray. Right: lid already flipped for the bed.

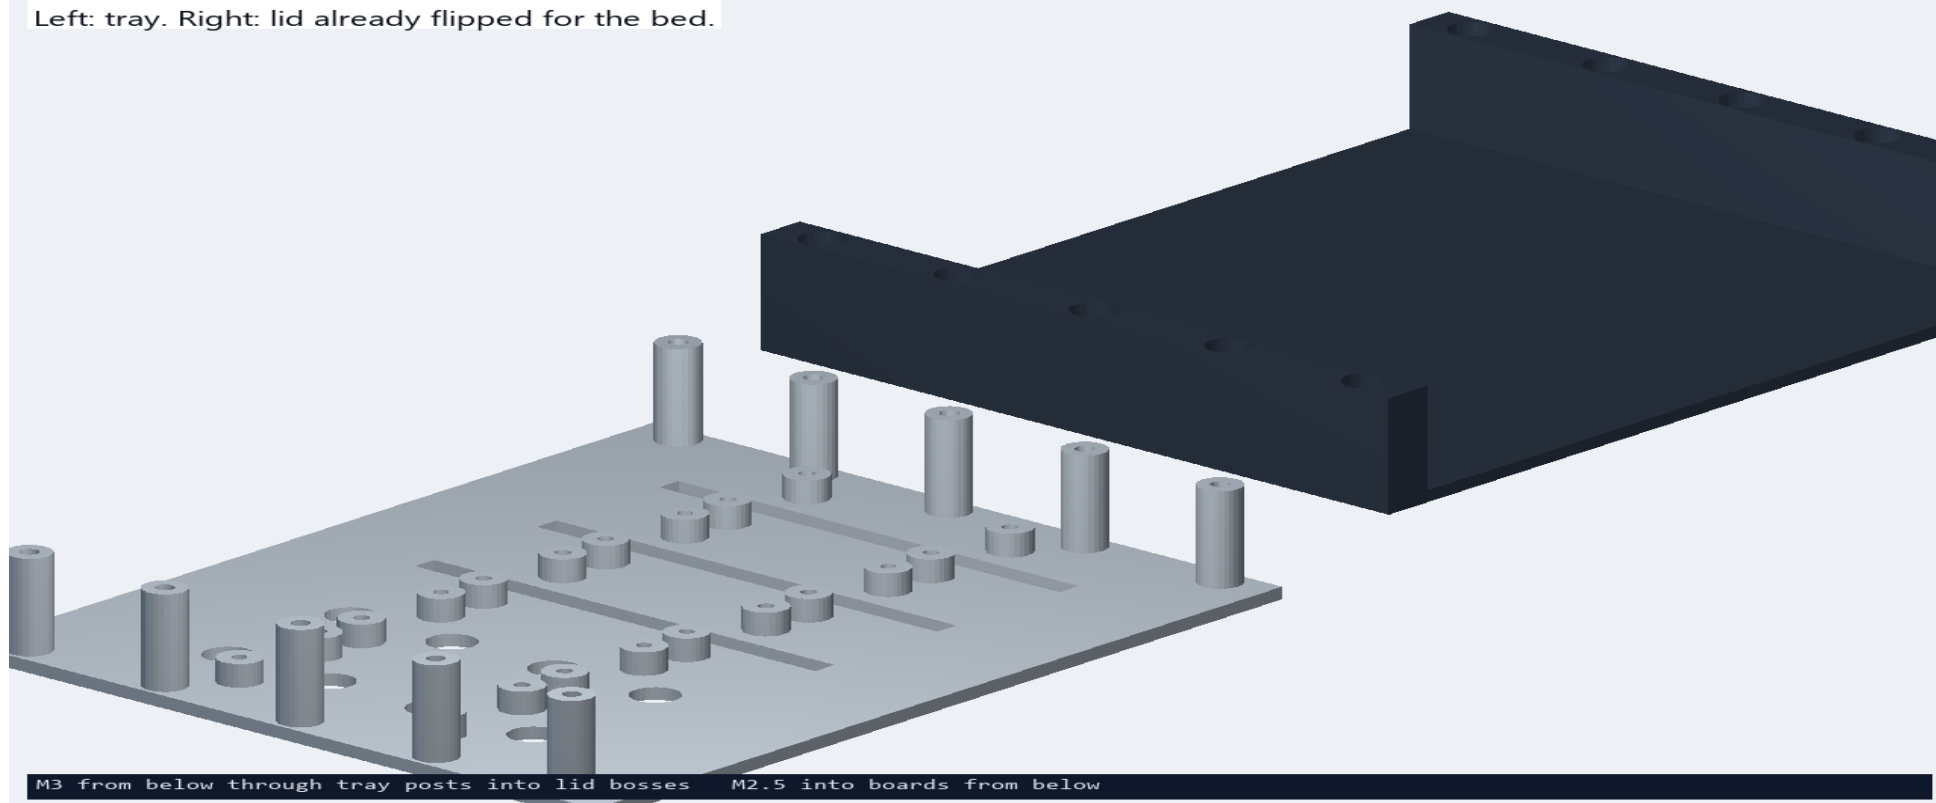

Fit test — flip the lid over

The lid STL is already upside down for the bed. Flip it 180 deg so the posts point down, then drop it onto the two side walls. Front and back of the tray are open.


Fit test lid flipped off the bed. posts down
Two side walls only. Front and back stay open.

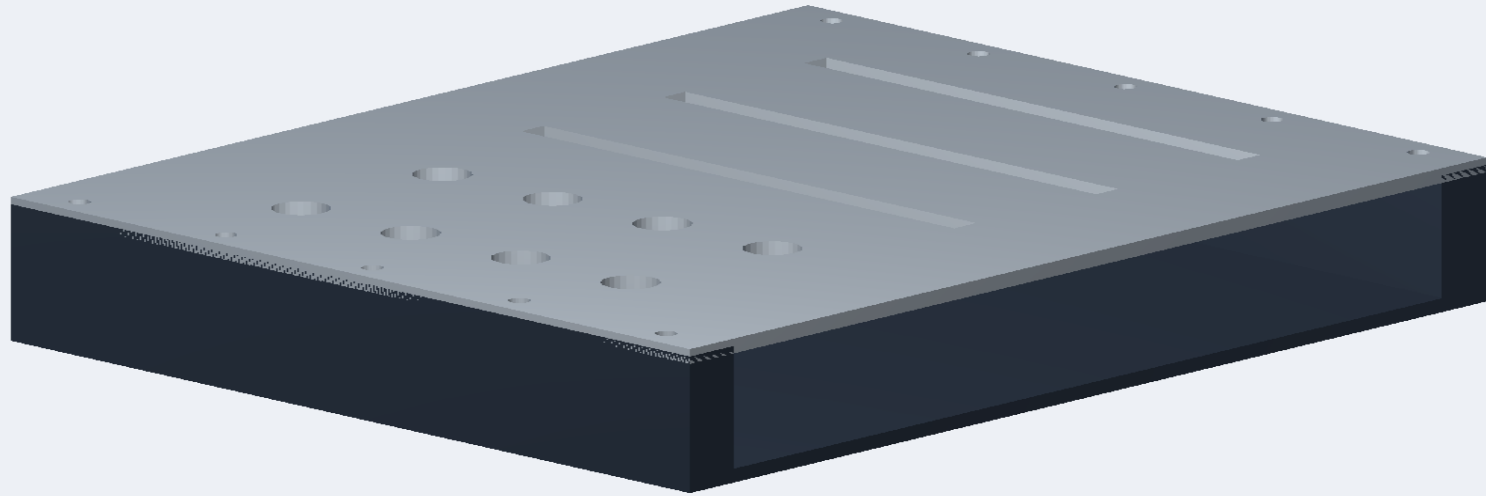

Print the lid upside down, flip it over, drop into the left and right walls


Bottom tray

Bottom tray 5 x 4 cells 25 mm inside M3 from below
ISO

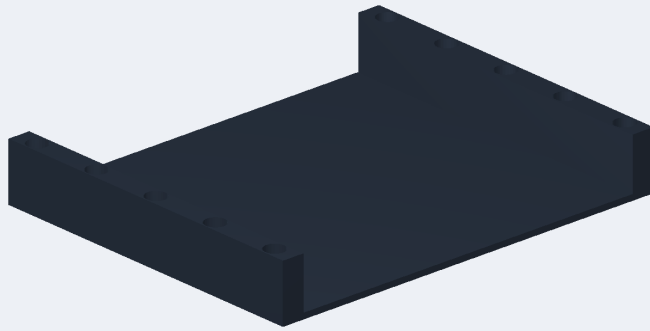


143.0 x 117.6 x 29.6 mm 1.00 in grid

Bottom tray 5 x 4 cells 25 mm inside M3 from below
ISO BACK

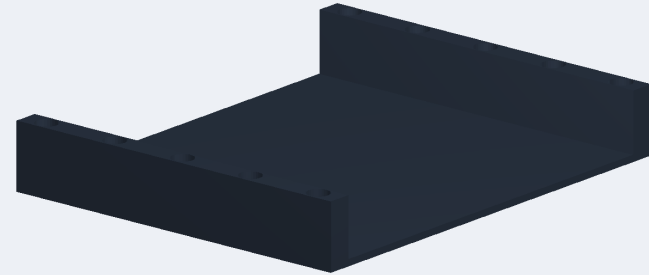


143.0 x 117.6 x 29.6 mm 1.00 in grid

Bottom tray 5 x 4 cells 25 mm inside M3 from below
TOP

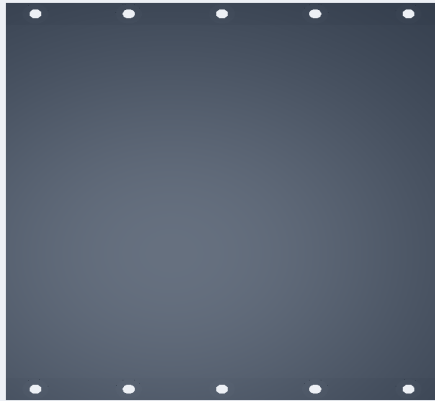

143.0 x 117.6 x 29.6 mm 1.00 in grid

Bottom tray 5 x 4 cells 25 mm inside M3 from below
SIDE




143.0 x 117.6 x 29.6 mm 1.00 in grid

Iso, reverse iso, top ortho, side ortho. Millimetres from the STL.


Top lid (print orientation)

Top lid print this way (visible face on the bed, bosses up)
ISO

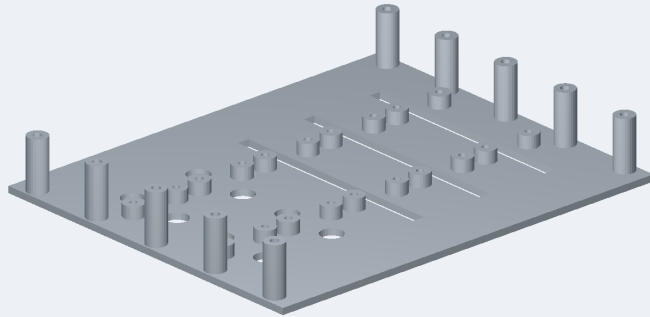

143.0 x 117.6 x 28.0 mm 1.00 in grid

Top lid print this way (visible face on the bed, bosses up)
ISO BACK

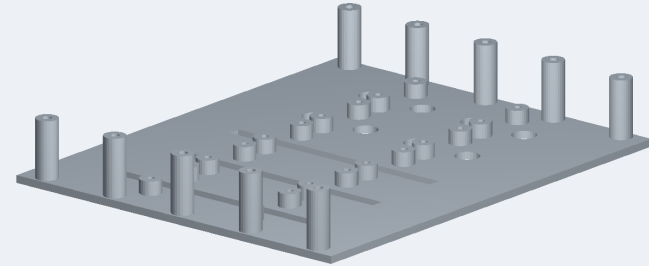


143.0 x 117.6 x 28.0 mm 1.00 in grid

Top lid print this way (visible face on the bed, bosses up)
TOP



143.0 x 117.6 x 28.0 mm 1.00 in grid

Top lid print this way (visible face on the bed, bosses up)
SIDE




143.0 x 117.6 x 28.0 mm 1.00 in grid


Iso, reverse iso, top ortho, side ortho. Millimetres from the STL.

Tilted tray demo


Tilt demo tray 4 x 6 rows 0,0,0,+30,+30,-30
ISO

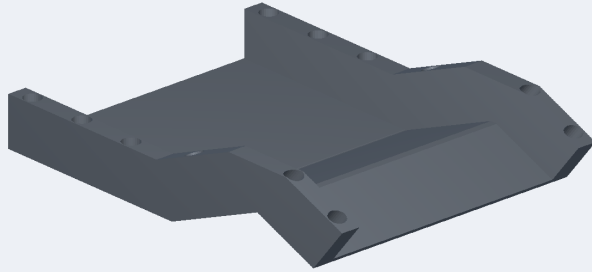


Tilt demo tray 4 x 6 rows 0,0,0,+30,+30,-30
ISO BACK

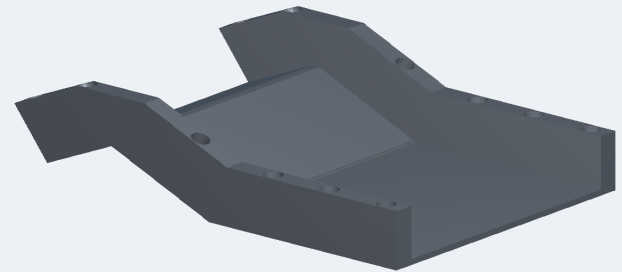

Tilt demo tray 4 x 6 rows 0,0,0,+30,+30,-30
TOP

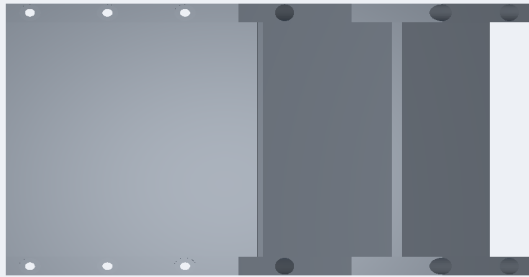


Tilt demo tray 4 x 6 rows 0,0,0,+30,+30,-30
SIDE

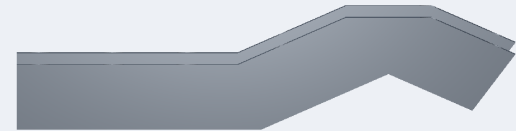

Iso, reverse iso, top ortho, side ortho. Millimetres from the STL.


Tilted lid demo

Tilt demo lid same slope, posts on the back of the lid in the rim
ISO

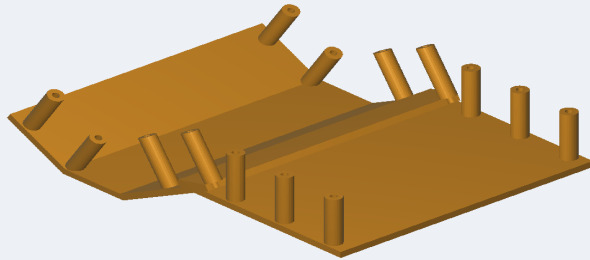


117.6 x 172.7 x 51.3 mm 1.00 in grid

Tilt demo lid same slope, posts on the back of the lid in the rim
ISO BACK

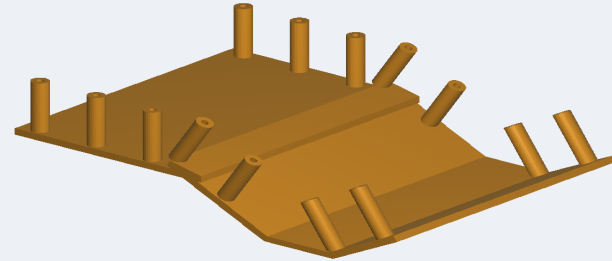


117.6 x 172.7 x 51.3 mm 1.00 in grid

Tilt demo lid same slope, posts on the back of the lid in the rim
TOP

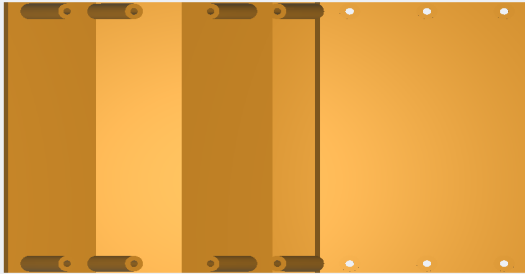

117.6 x 172.7 x 51.3 mm 1.00 in grid

Tilt demo lid same slope, posts on the back of the lid in the rim
SIDE

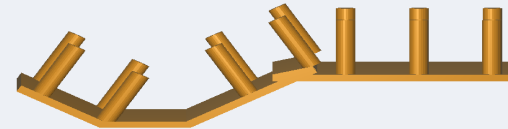

117.6 x 172.7 x 51.3 mm 1.00 in grid

Iso, reverse iso, top ortho, side ortho. Millimetres from the STL.